


Installation instructions for foundation Universal Medium (UM) G2 with accessories

(Seperate documents for mounting plates)

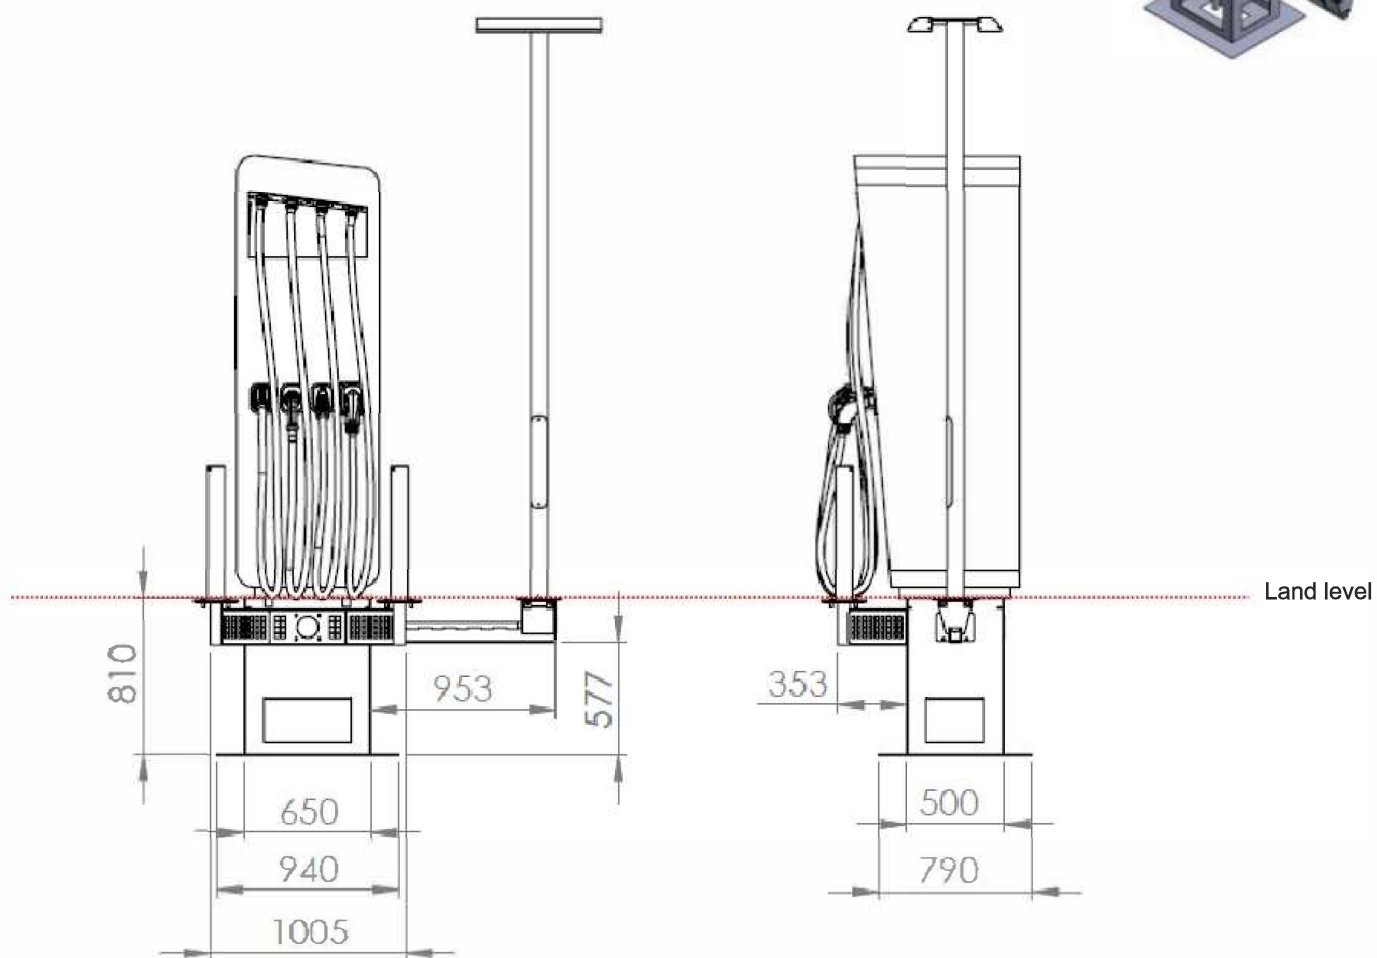

Installation instructions for foundation Universal Medium (um) G2 with accessories


(Mounting plate is ordered separately depending on charging manufacture)

Component (s):

	Number	Art. No	Name
	1	1060-3002-1000-4	Foundation universal medium (at) G2 Rev D
	4	31-462570-0	Konic Plug 109x113x27
	1	1060-3000-1210-7	Bultkit Universal Medium
	1	1060-3002-1300-4	Adapter for UM Lighting Post 90
	4	9200-1000-2590-0	Nitmutter EBP M12x70 A2
	1	1060-3002-1301-6	Bolt Kit post bracket & collision protection UM
	2	100-600-06xx	Luminaire FL WIDE 3M 4000K 640mm 45W screws, cables, nuts etc. included
	1	0110-2410-20X-5	FL WIDE CONSOL Double G2
	1	0110-2412-2000-5	Lighting pole 3m G2
	1	0110-2410-2050-50-	Lighting Post Luck
	1	5 0110-2412-2070-2	Tractload G2 Electronic
	1	0110-2412-2060-60	plate Stolpe bolt kit and screw included
	1	1060-3002-1800-4	TP3002-1800 Driving protection Ø90 Adjustable Arm
	2	1060-3002-1820-6	Collision protection UM, adapter to bollar Ø90
	2	9200-1000-4723-0	Borrskruv BIMEX UFO 5,5x25/3,5 RF m packn Torx
	1	1060-3002-1301-6	Bolt Kit post bracket & collision protection UM
	1	0110-2420-2200-5	Bollera H: 700 Ø90
	1	0110-2402-9110-6	Bolt kit bollar steel


Installation manual Art. No. 1060-
3002-1000-60

Fundament Universal Medium (UM) G2

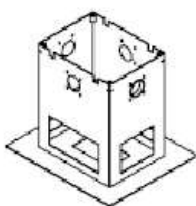


1. Place the foundation on the ground bed.
Make sure it is the correct side (long/card)
that is towards car location

- a. Pull the required empty pipe/cabling
- b. Fill again and pack according
to current AMA (up to the
round hole)

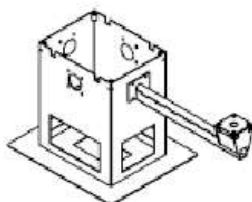

2. Screw the adapter for lighting pole
with associated screw and nut

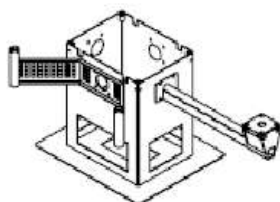


3. Screw holder to collision protection

Fill up and pack according to current AMA
asphalt (some paves only after step 4)


Installation manual Art. No. 1060-
3002-1000-60

Fundament Universal Medium (UM) G2

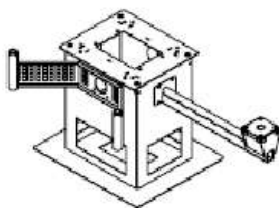


4. Mount the mounting plate (in this case
HYC 300/400).

The assembly plate is ordered separately
depending on charging products.

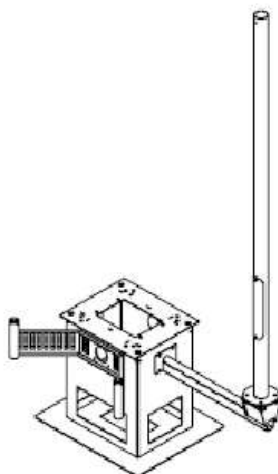


5. Mount the lighting post

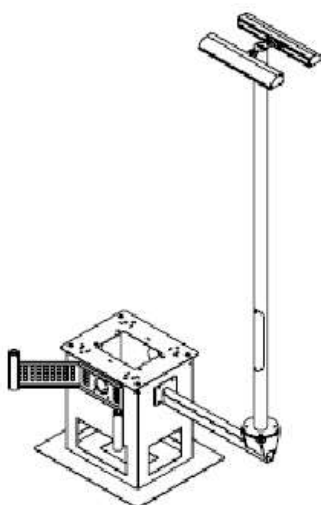


6. Installing console and luminaires/er

Installation manual Art. No. 1060-
3002-1000-60


Fundament Universal Medium (UM) G2

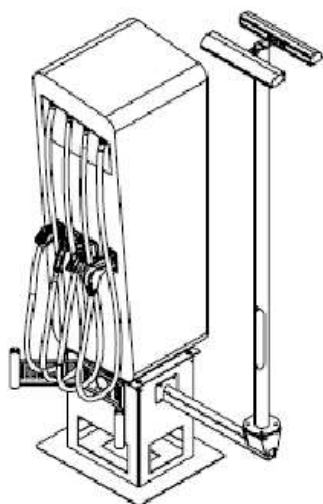

7. Install the charger

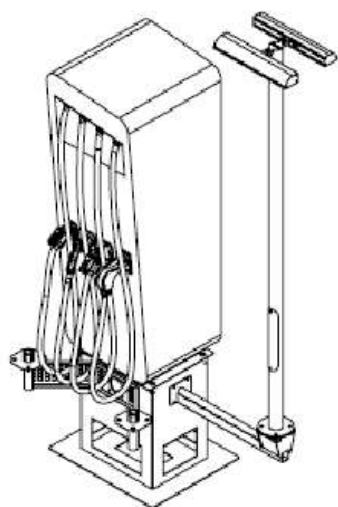

8. Mount adapter for bollards

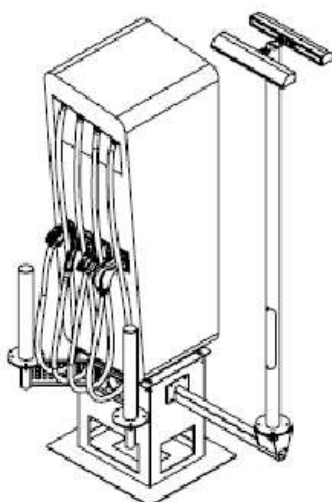

9. Mount bollards