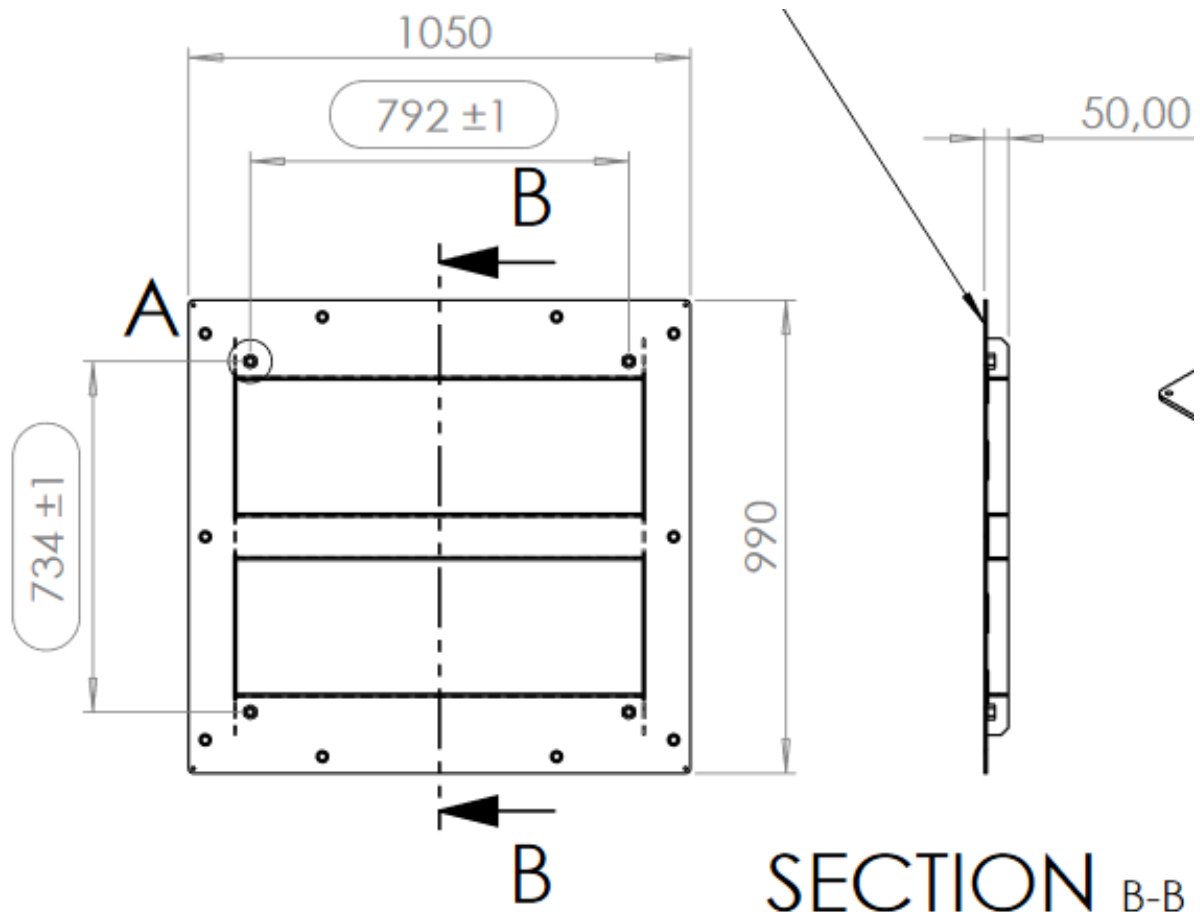


INSTALLATION GUIDE

MOUNTING PLATE EKO-E AXON S360


1. Position the plate on the base and secure it with the screws. The screw must be aligned centrally within the hole.
2. Secure the screws in a diagonal pattern to ensure an even distribution of load.
3. Secure using a torque wrench, 85-90 Nm.

COMPONENTS:

Units	Art. No	Name
1	1060-3010-0020-60	Mounting plate UL Eko-E Axon S360
10	9200-1000-2162-0	Screw MF6S M12x25 Fully threaded FZB